

Marubot **Football** League (2 players)

User Manual



★ Specifications including design and color are subjected to change without notice.

Important

- ▶ Please read the manual carefully before using this machine.
- ▶ Keep this manual for your reference at anytime.



Table of Contents

Precautions for use	2
1. Introduction	
1.1 Product Information	6
1.2 Components	7
2. Installation Description	
2.1 General Instructions	8
2.2 Installation	8
2.3 Handling the robot	11
2.4 How to set the robot speed	12
3. How to play?	13
4. Game Setting	
4.1 Sound Volume	15
4.2 Service Coin	15
4.3 How to Control the blow button	15
4.4 Mode, set, and enter button	16
4.5 How to set up Coin Selector	19
5. Cleaning	20
6. Trouble Shooting	
A. The Robot is not moving	21
B. The ball does not come out	22
7. Parts replacement	
7.1 Robot	23
1) Exchange of pins	
2) Exchange of Tire	
7.2 Stadium	24
1) Exchange of LED in the playground.	
8. Specifications	
8.1 Stadium specifications	25
8.2 Robot specifications	30
8.3 PCB Circuit Diagram	35
9. Appendix	
9.1 Core technologies	36
10. Customer Service	37

PRECAUTIONS FOR USE

The following safety precautions are given throughout this manual. They must be strictly followed to protect those who install, use or maintain this product as well as to prevent other people's injuries and property damages.

Be sure to read the following

people's injuries and property damages.

- The following suggestions show the degree of danger and damage caused



WARNING

Indicates a situation where disregarding the suggestions could result in death or serious injury.



CAUTION

Indicates a situation where disregarding the suggestions could result in injury or product damage.

- The following graphic suggestions describe the types of precautions to be followed.



Indicates a matter of which care should be taken.



Indicates a matter which is forbidden.



Indicates a matter which should be performed without fail.

- The following graphic suggestions describe the types of precautions to be followed.

In this instruction manual, some procedures require a qualified in-shop maintenance person or industry specialist. For such instructions, a qualified person must take care of the jobs.

- Otherwise an electric shock, machine trouble, or a serious accident may result.
- Replacing the machine parts, inspecting and maintaining the machines, and troubleshooting must be assigned only to a qualified in-shop maintenance person or industry specialist. This booklet gives instructions that hazardous jobs in particular must be handled by an industry specialist. Qualified in-shop maintenance person and industry specialist are defined as follows.

Qualified in-shop maintenance person

- A qualified in-shop maintenance person must have experience in maintaining amusement machines. Under the supervision of an amusement machines shop owner or manager, he or she routinely assembles, installs, inspects and maintains the amusement machines, or replaces their component units and consumable parts, in the amusement machines workshop and/or location.

Jobs handled by qualified in-shop maintenance person

- Assembling, installing, inspecting and maintaining amusement machines and replacing their component units and consumable parts.

Industry specialist

- An industry specialist must be engaged in designing, manufacturing, inspecting and servicing amusement machines. Or he or she must have an education in electrical, electronic and mechanical engineering, and routinely maintain and repair amusement machines.

Jobs handled by industry specialist

- Assembling and installing amusement machines and repairing and adjusting their electrical, electronic and mechanical component parts.

Setting Up



WARNING

Be sure to consult your nearest dealer when setting up, moving or transporting this product.

- This product should not be set up, moved or transported by any one other than an industry specialist. Doing so could result in injury or product damage.
- When installing this product, set the 4 leg levelers evenly on the floor and make sure that the product is installed stably in a horizontal position. Unstable installation may result in injury or accident.
- When installing this product, use caution not to apply undue force to opening and closing parts and other movable parts. Otherwise, injury and accident may result, or the product may be damaged.

This product is an indoor game machine. Never set the game machine up outside.

- Setting this product up outside could result in accidents or equipment failure.

Do not set the game machine up near emergency exits.

- Doing so could block exits in time of emergency and could result in death or serious injury.

Do not set the game machine up.

1. In a place exposed to rain or moisture.
 2. In a place exposed to direct sunlight.
 3. In a place exposed to direct heat from air-conditioning and heating equipment, etc..
 4. Near hazardous flammable substance such as thinner and kerosene .
- Otherwise an accident or malfunction may result.

Do not place containers holding chemicals or water on or near the game machine.

- Electrical shock or damage could be caused by water or foreign matter entering the inside of the machine.

Do not place objects near the ventilating holes.

- Doing so could cause the internal temperature to rise excessively, resulting in fire or equipment failure.

Do not bend the power cord by force or place heavy objects on it.

- Doing so could result in electrical shock or fire.

Never plug or unplug the power cord with wet hands .

- Doing so could result in electrical shock or fire.

Never unplug the game machine by pulling the power cord.

- Doing so could damage the cord, resulting in electrical shock or fire.



CAUTION

Be sure to use indoor wiring for within the specified voltage range.

For extension cord, use indoor wiring of the specified rating or more.

- Failure to do so could result in fire or equipment failure.

Be sure to use the attached power cord.

- Otherwise a fire or machine trouble may result.

Never plug more than one cord at a time in the electrical receptacle.

- Doing so could result in fire or electrical shock.

Do not lay the power cord where people walk through. You may trip on or stumble over the cord.

- You may stumble down and get injured, or damage the power cord.

Be sure to ground this product.

- Otherwise an electrical shock or machine trouble may be caused.

Do not apply a strong force for moving the machine.

- Otherwise, it may result in an accident or breakage of the units.

Clearance of 100 mm (3.94in) or more should be created between the game machine and walls.

- Otherwise the machine (s) cannot be ventilated well, resulting in malfunction.

Do not change the DIP switch setting of this product to other than factory setting.

- Otherwise, the game can not be played properly.

Operating



WARNING

If there is any abnormality such as smoke, bad smell or abnormal noise being emitted from the machine, immediately turn OFF the main power switch and unplug the power cord from the receptacle to stop operating it.

- Using the machine in abnormal conditions could result in fire or accidents.



In case of abnormality

1. Turn OFF the main power switch.
2. Unplug the power cord from the receptacle.
3. Contact your nearest dealer.

Do not leave the power cord plugged in improperly or covered with dust.

- Doing so could result in electrical shock or fire, so inspect the power cord periodically.



CAUTION

Do not use this product anywhere other than industrial areas.

- Using in a residential area or an area next to a residential area could affect signal reception of radios, television sets, telephones, etc..



Do not give impact to the glass cover.

- Otherwise, it may result in an unexpected accident or injury.

- Please do not play this game if
 1. you have been drinking.
 2. you are tired or sick or have been recently sick.
 3. you think you might be pregnant.
 4. you have a pace maker.
 5. you have previously experienced muscle spasms or loss of consciousness by watching a TV screen.
- This game is designed for one player only. Do not play with 2 or more people.
- When playing, please be aware of your surroundings.

Do not plug or unplug the power cord with wet hands.

- Doing so could result in electrical shock.



In handling the power cord, follow the instructions below.

- Otherwise, fire or electrical shock may result.

- Do not damage the power cord.
- Do not bend the power cord excessively.
- Do not heat the power cord.
- Do not bind the power cord.
- Do not sandwich the power cord.
- Do not modify the power cord.
- Do not twist the power cord.
- Do not pull the power cord.
- Do not stand on the power cord.
- Do not drive a nail into the power cord.



If the power cord or power plug becomes damaged, stop using the machine immediately and ask your nearest dealer to replace the parts.

- Using a damaged power cord or power plug could result in fire or electrical shock.

Inspection and cleaning**Moving and transportation****WARNING**

Be sure to turn OFF the main power switch and unplug the power cord from the receptacle before inspecting or cleaning the machine.

- Failure to do so could result in electrical shock.

When replacing parts, be sure to use parts of the correct specifications.

Never use parts other than the specified ones.

- Using improper parts could result in fire or equipment failure.

There is high voltage inside the machine.

Only qualified industry specialist is allowed to open the machine's back door.

With the back door open, be very careful not to touch the monitor and its nearby parts.

- Otherwise an accident or electric shock may result.

If the sub power switch of the service panel is turned OFF without turning OFF the main power switch of the power supply unit, some parts in the units remain live. When opening the back door, be sure to turn OFF the main power switch and unplug the power cord from the receptacle.

- Otherwise, there may be danger an accident or electric shock.

Strictly refrain from disassembly and repair of parts which are not indicated in this manual, as well as settings and remodeling.

- Otherwise, a fire, malfunction or trouble may result. In case of any trouble, ask your nearest dealer for repairs and other services. ANDAMIRO will not resume any responsibility for the damage to the product attributable to disassembly and repair of parts which are not indicated in this manual, as well as settings and remodeling.

To clean the game machine, wipe it with a soft cloth dampened in a neutral detergent.

- Using thinner or other organic solvent or alcohol may decompose the material.
- Electrical shock or equipment failure could be caused by water entering the inside of the machine.

**CAUTION**

The game machine contains parts such as electronic components and precision components which are sensitive to vibrations and impacts. Great care therefore should be taken when moving and transporting the game machine.

Be sure not to let the machine tip over.

Before moving the machine, be sure to turn OFF the main power switch, unplug the power cord from the receptacle and remove the power cord from the machine.

- Stepping on or tripping over the power cord may result in an accident or damage to the machine.

Before moving the machine, be sure to fully lift the four levelers and move it on the casters.

- Otherwise, an accident, breakage or trouble may result.

Do not apply a strong force for moving the machine.

- Otherwise, it may result in an accident or breakage of the units.

**PRECAUTIONS IN HANDLING**

- When setting up, inspecting, maintaining, moving or transporting this product, follow the procedures and instructions set forth in this manual and perform such work safely.
- Do not set up, handle, inspect, maintain, move or transport this product under conditions equivalent to the condition of "**WARNING**" or "**CAUTION**" specified in this manual.
- If a new owner is to have this product as a result of transfer, etc., be sure to give this manual to the new owner.

1. Introduction

Welcome!

Thank you for purchasing our Marubot Football League game machine. It is brand-new model of the robot game machines that we have developed this category since 2003. The basic techniques under patent pending are stable power supplying method without any power cable or battery and infrared ray control system. Our techniques make it possible to operate the robot without any additional countermeasure to play the game once it is launched.

Please read this manual carefully before operating the machine to avoid any trouble from wrong use. Thank you and enjoy with our robots.




1.1 Product Information

- Game Name : Marubot Football League (4 players)
- Main Features :
 - Using our patented technologies, 4 players control wireless robots one by one in the play ground using the joystick.
 - Football or battle game can be played. Since there is no need additional battery charging, players are able to last enjoying the game.
- Specifications :
 - Dimension : 1500 * 870 * 864 (W x D x H)mm
 - Weight : 185 kg
 - Power : AC 230V, 50Hz

1.2 Components

All components are in the box on the play ground inside of the cover.

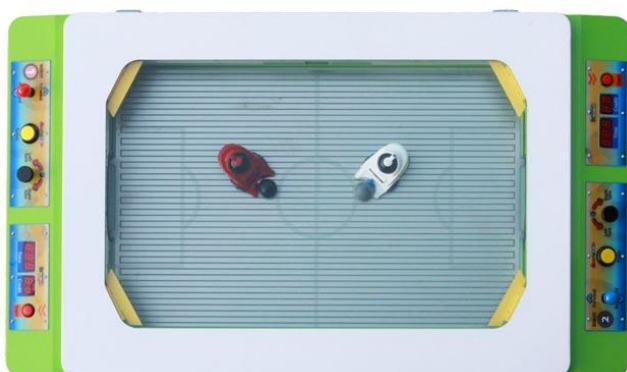

< Game Playing Machine >
"Stadium"



< Robots >
Red : 1, White : 1



< Spare Part : Power supplying Pin
Total 12 ea (2 robots, each 6 pins) >



< 2 Balls >



< Snap Ring for Wheel >



 
< the hexagon socket
screw key, 2.5" >



<Key : 2 kinds>
(1for glass cover , 1 for Main Body)



< Hand Cleaner : 1>



<AC Power Cable : 1>



<Manual>


2. Installation Description

2.1 General Instructions

- 1) Consider to avoid the place such as humid, dusty or any possibility to damage the machine during transportation or storing the machine, otherwise it can be major reason to damage the machine.
- 2) Do not disassemble, repair, or remodeling the machine except authorized expert.
- 3) Avoid direct sunlight or placing the machine beside heating machine.
- 4) Do not put wet hands or articles on the power supplying board once the power in "On".
- 5) Before cleaning the machine, the power should be "Off". Do not put the water or chemical cleanser inside of the machine and just clean up with dried towel. Get rid of any wetness.
- 6) Make sure to remove any dust and especially metallic articles on the power supplying board, otherwise it is caused to short the power or create possible burning.

2.2 Installation

- Installation or dismantling should be made by authorized expert. Contact your local dealer if you have any trouble on the machine.
 - Avoid any shock during transportation or installation.
 - Keep the machine horizontally and hold it with stopper provided.
 - The Z/B signal might be jammed up, if you install more than 2 machines in same area(within20m)
- 1) Location
 - Find stable and flat place. Avoid moisture place.
 - Avoid a direct light, heat, and the place changes humidity and temperature dramatically.
 - All machines must use proper power outlet.
 - Please check total amperage when you use an extension line.
 - 2) Set up
 - Fix the machine with stoppers under the machine.

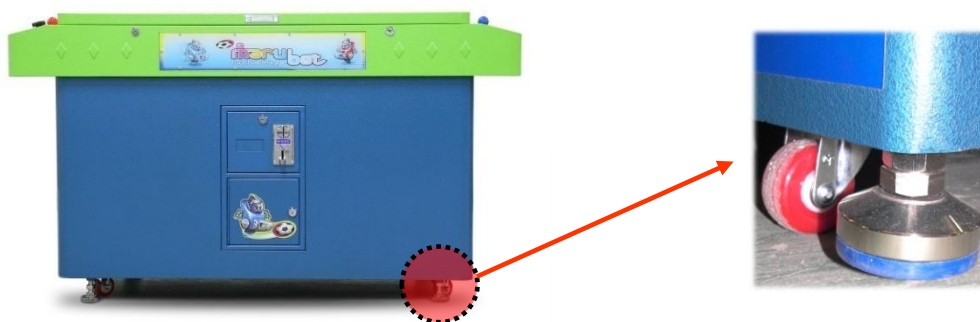

3) Installing Robots and Ball

- Open the chemloks located on the cover then pull up the cover.
- Put the robots and ball in the playing ground.
→ Read page 12, “2.3 Handling the robot” first before put the robots in.
- Then, pull down the cover carefully.
→ Watch you hand when you make it close.
→ Check the playing ground is clean against conductors.



① Open The chemloks



② Turn the handle in the middle of the cover




③ The handle comes out



④ Grab the handle and pull up the cover



⑤ Pull up until the shock-up pull out fully

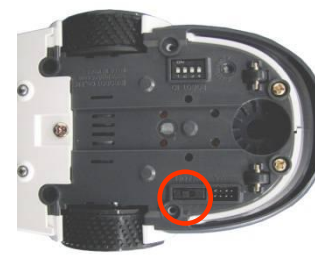

⑥ Turn on the switch on the bottom of the robots



⑦ Check the playing ground is clean





⑧ Pull down the cover



⑨ Watch out you hand jammed.

4) Connect a main power cable

- Connect a main power cable AC input on the backside with an outlet.
- Don't treat electricity with wet hand

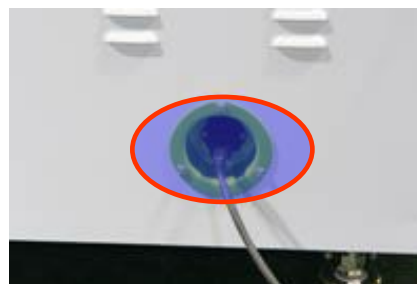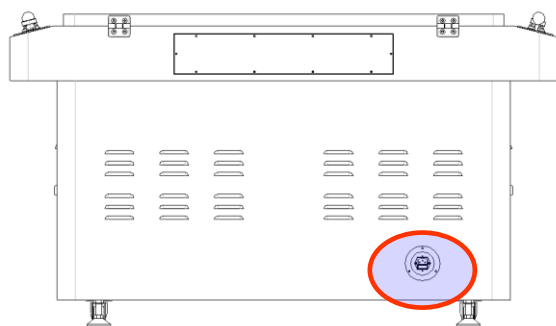

5) Turn on the main Switch

- Open the front door, and Turn on the switch located in control panel.



① Open the front door using a key



② Turn on the switch on the control box



Main Power switch

6) Check the proper working

- Insert coin and play game to work properly.
- Set the volume according to the condition.
- Other functions of control panel are described on page "16"



Volume Controller



Service Coin button

7) When you see the front side of Machine, you can find coin/bill assembly.



Coin module




Coin Collect box




2.3 Handling the robot

- 1) Position the power switch to "On" which is located on the lower side of the robot and lay down it on the power supplying board.

♣ Remark : On/Off switch of the robot

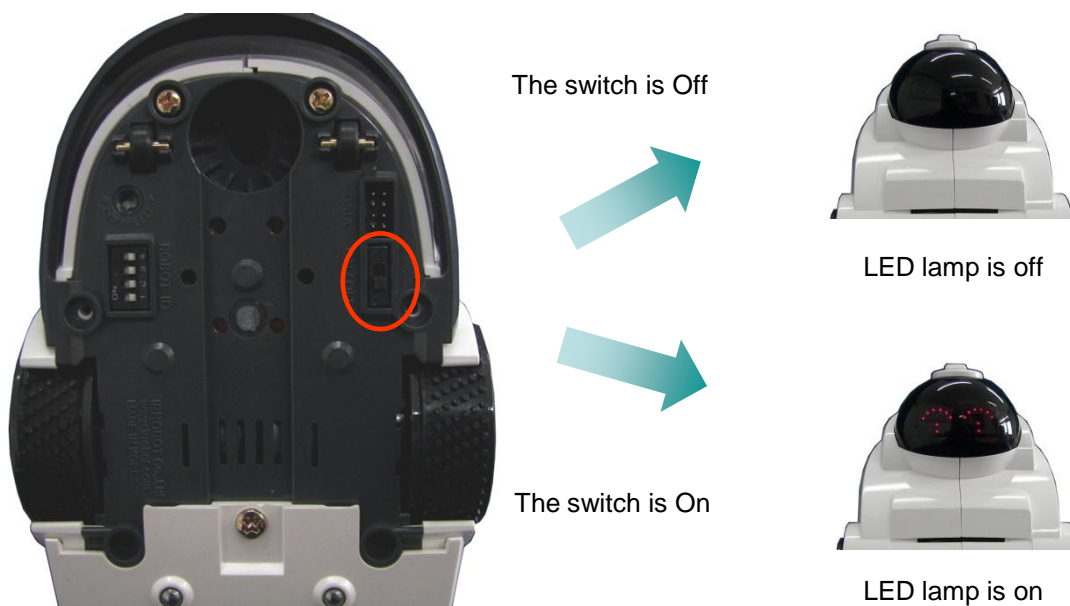

- 2) Since very sensitive electronic parts are used for the control unit and the robot, avoid any shock.
- 3) It is recommendable to play the game after 20~30 minutes from the power "On" because warm-up is needed to avoid troubles if the machine is not operated in the long time.
- 4) The wheel of the robot can be worn away or changed its shape after long time operated, check the condition of it periodically and replace it if it is not good shape. If the wheel is cleaned out from time to time, it will drive more smoothly.
- 5) **You have to check the power supplying pins periodically. They are needed to replace immediately when they are run out. (Every 500plays are recommended)**
- 5) In case the storage battery is discharged, the robot is inactive, position the power switch to "On" and place the robot on the power supplying board at least 30 minutes. Make sure that the power of the control unit should be "On" and not to play the game until full charged.

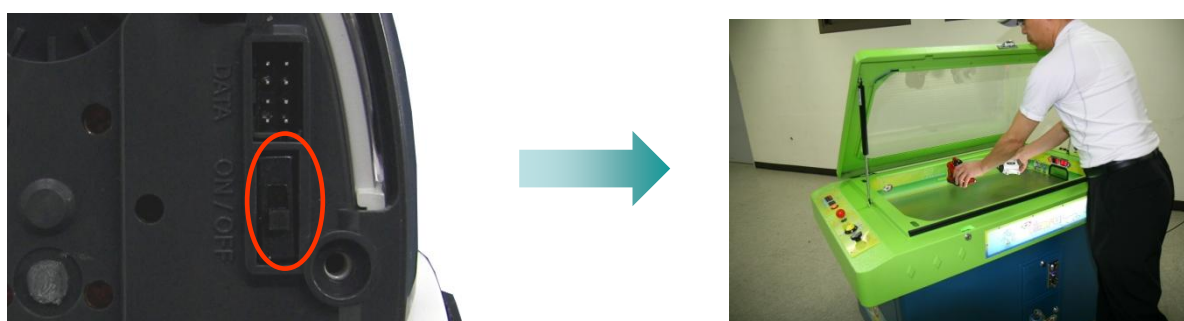


2.4 How to set Robot Speed.

* The operator can adjust speed of robot.



< The location of ID S/W >

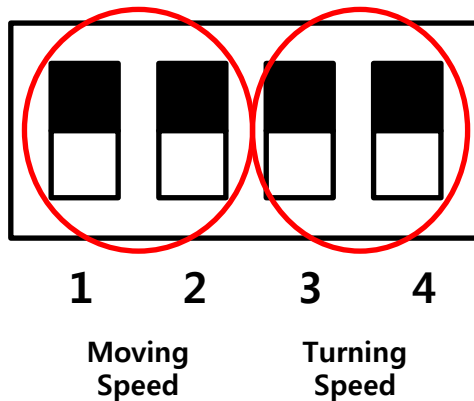


1, 2 Control moving Speed
3, 4 Control Turning Speed



***White” means the switch position**





Fastest

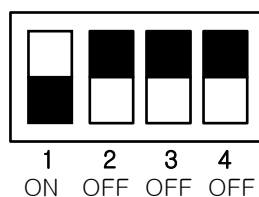


Fast

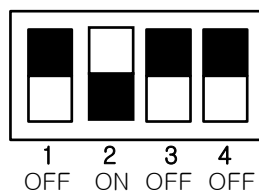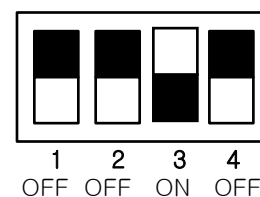

Normal

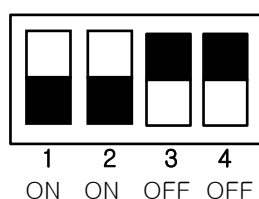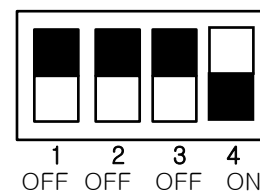

Slow

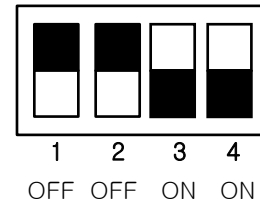

*** When setting is finished, the power should be off and on.**

3. How to play ?


① Insert Designated Coin.

- When you insert coin, the start button is lighted on.
- The FND shows Credit number.
- Give 10 seconds to find players robot and prepare.



② Push the "Start" Button on both display panel.

- The both side "Start" buttons must be pushed for starting game.
- "Start" button's light turns off when the game is started.
- Even if player doesn't push the start button,
The game starts automatically after 10 seconds.
- The LED lamps in the playing ground are turn in white.
- Start the game with whistle.
- "Time" FND shows remaining game time.
- The Operator can adjust the game time
- Default game time is 3 minutes.

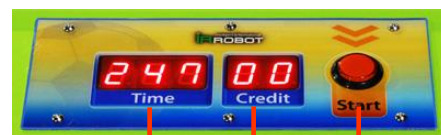

Time Credit Start 버튼

(Refer to page 16,17)

③ Control the robot using joystick and steering.

- Joystick control
push up : Go forward
Pull down : Go backward



조이스틱 터보버튼 핸들

- Steering control
Turn left : Turn left
Turn right : Turn right

- Turbo Button (It turns on when you push the button)
It moves faster when you control the robot pushing the turbo button.
There is no function individually.

④ Robot function


- Dribble : the player control the ball with magnetic on the front of the robot.
- Battle : Beat the enemy when you want to intercept the ball..
It's not easily broken with crash.
- Ceremony : The robot does ceremony when you make a goal or win the game.
- Face expression : The face expression change occasionally.(refer to page14)

⑤ After making a goal

- After making a goal, the ball will be on the floor automatically by the air blow system built-in.




- Number of goal will be shown on the display.
- The team who make a goal, they will do goal ceremony.
- The team who lose a goal, they will show sad expression.

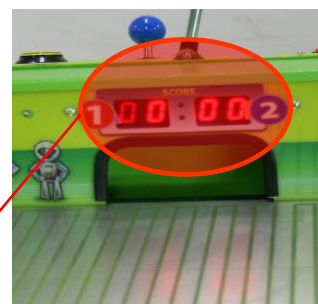

Score FND

- ♣ Face expressions of the robot are changing according to the situations.

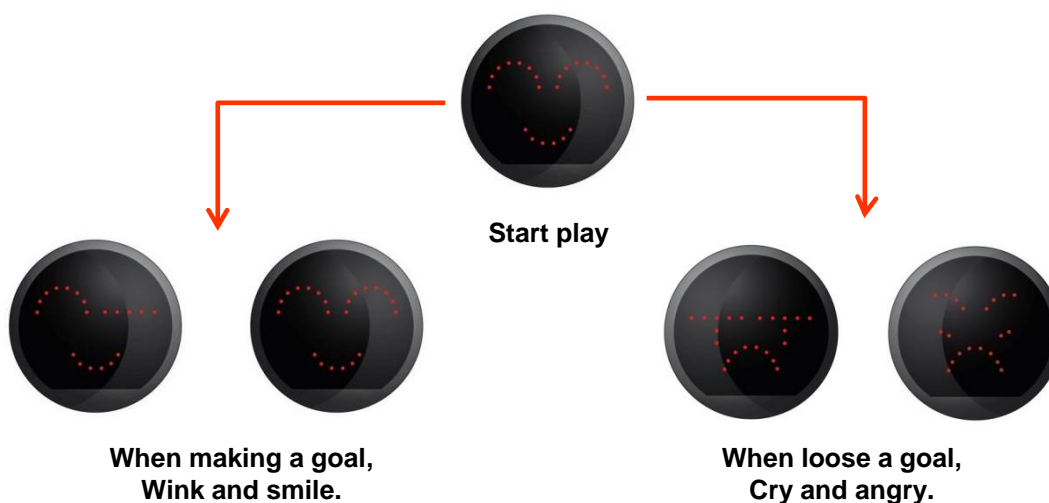

⑥ The game is over after designated time is passed.

(The game time is set as 3 minutes from the factory.)

- After the game is over, the winner will do goal ceremony.
- After the game is over, the loser will show sad expression.
- If the game is over in a tie, both teams will do final ceremony.


4. Game Setting

•Control panel

The Control panel is located inside of small door.



Open a lock with a key.

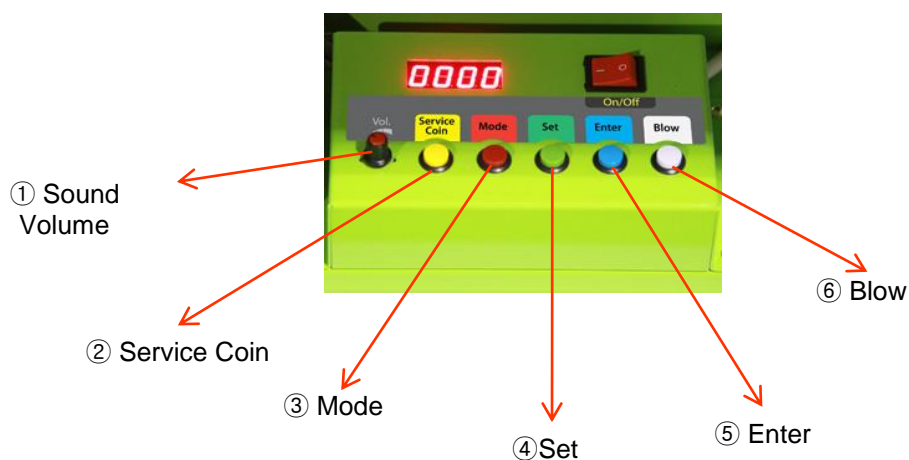

4.1 ① Sound Volume

The sound will be bigger to turn the volume controller to counter clockwise.

4.2 ② Service coin


To play the game free of charge, push the service coin button.

4.3 ⑥ How to control the blow button

In case of the ball does not come out push the blow button.

4.4 Mode, Set, and Enter button

You can set time, coin, count, and credit by using mode and set button.

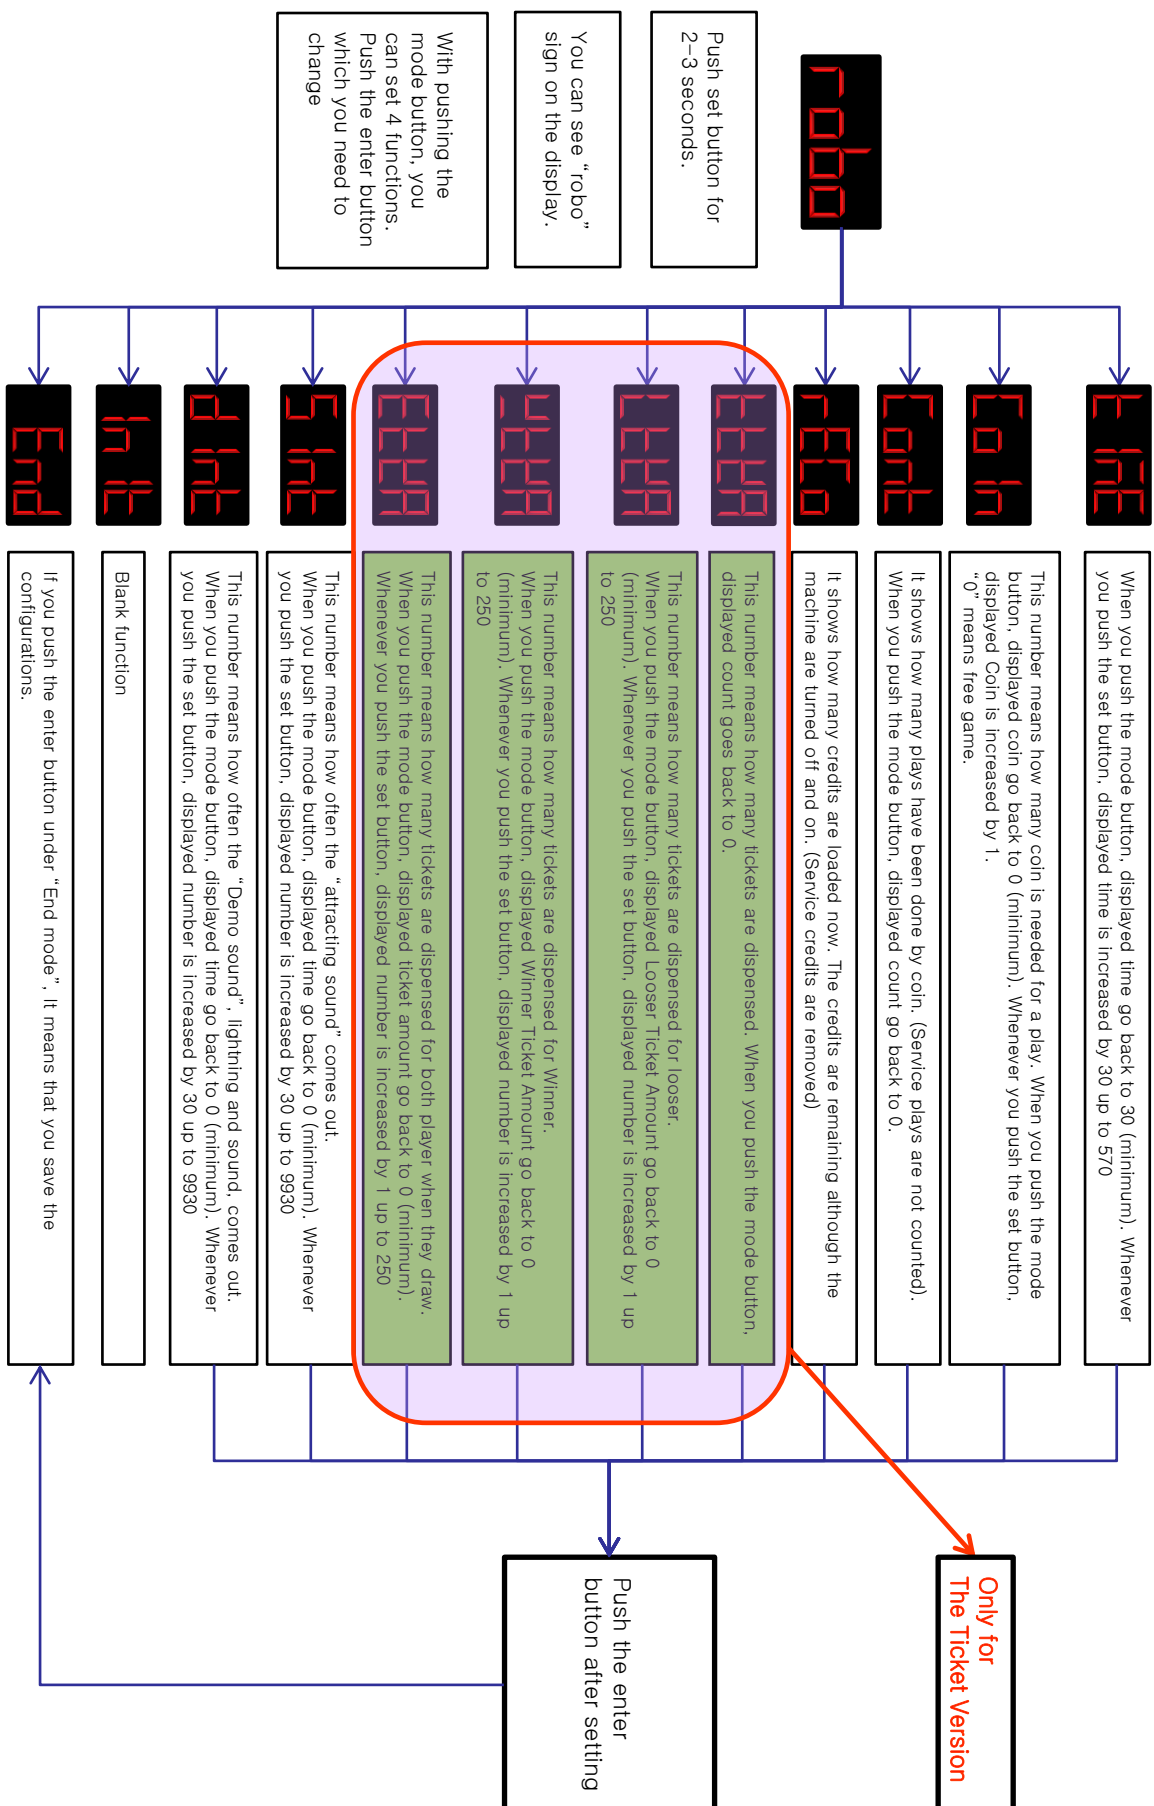

4.4.1 Coin Setting.

◆ Set the coin number for a game

◆ How to set?

Set (Push 2~3 Sec) **robo** → push Mode (1time) **coin** → Enter button

→ Increase the number by 1, when you push the set button. From **0000** to **0255**

When you push the mode button, the number goes back to **0000**

→ After setting the number, push the enter button **End** → Push the enter button again.
SAVE

4.4.2 Time Setting.

◆ Set the play time for a game

◆ How to?

: It can be adjust from 30 to 570 seconds.

Set (Push 2~3 Sec) **robo** → push Mode (2time) **time** → Enter button

→ Increase the number by 30, when you push the set button. From **0030** to **0570**

When you push the mode button, the number goes back to **0030**

→ After setting the number, push the enter button **End** → Push the enter button again.
SAVE

4.4.3 Credit reset

◆ The number of credit goes back to "0"

◆ How to?

Set (Push 2~3 Sec) **robo** → push Mode (3time) **reco** → Enter button

→ It shows the loaded credit number. EX) 2coins **0002** → Push the mode button **0000**
the count goes back to "0"

→ After setting the number, push the enter button **End** → Push the enter button again.
SAVE

4.4.4 Attract sound time.



◆ **Attract sound (the sound when the games are not playing) interval setting..**


◆ **How to?**

: It can be adjusted from 0 to 240 by 30.

If you set "0", the function does not work.

Set (Push 2~3 Sec)  → push Mode (9time)  → Enter button





→ Increase the number by 30, when you push the set button. From  to 

When you push the mode button, the number goes back to . 

→ After setting the number, push the enter button  → Push the enter button again.



4.5 How to set up Coin Selector

No	Photos	Setting Up
1		Setting Module
2		Pull out the module slowly as shown.
3		Put the coin into the coin setting hole and adjust module width for the coin that you want to use.
4		Push the module to original position, then setting-up is finished.

[Note]

The above coin selector shows only general type.

Therefore, If you want to use your own coin, then please discuss with your local dealer or directly with us in order to confirm how to change. And also if you want to use bill selector or ticket dispenser additionally, please discuss with your local dealer or directly with us as mentioned above.

5. Cleaning

5.1 Stadium

Regular cleaning helps robot's smooth moving and life cycle.

It need at least once a month. If it's under dusty condition, it is needed once a week

- 1) Turn off the main switch before cleaning.
- 2) Open the cover
- 3) Clean with the cleaner that we supplied(Strongly recommended).

If you use wet towel, you have to dry up before operating.

- 4) Close the cover
 - ➔ Watch you hand when you make it close.
 - ➔ Check the playing ground is clean against conductors.



①Open The chemloks



②Turn the handle in the middle of the cover



③The handle comes out



④Grab the handle and pull up the cover



⑤Pull up until the shock-up pull out fully



⑥Clean the playing ground with dry towel.



⑦Check the playing ground is clean



⑧Pull down the cover



⑨ Watch out you hand jammed.

6. Trouble shooting

A. Robots are not moving

- 1) Check the main power is on.
If every powers are on, go to next step.
- 2) Even every powers are on, FND, and LED are out, there are conductors on the playing ground.

Check point : ① Turn off the main power switch on the control panel.

② Disconnect the main AC cable.

③ Pull up the cover and clean the playing ground.

④ Check the power 6 supplying pins on the bottom of the robot.

(Six pins are need exactly. If there are not enough, please reinstall all of six)

⑤ Check the condition of power supplying pins.

If they are abnormal condition, need to replace.

⑥ Turn on the robot and put them on the playing ground.

⑦ Pull down the cover and connect AC cable.

⑧ Turn on the main power switch on the control panel.

⑨ Try to play game, that it works properly.

⑩ If there is still a problem, go to next step.

- 3) You need to check Main Board and transportation.

Call to the engineer.

B. One of two robot is not moving.

- 1) Check the robot switch is on.
- 2) Check the power 6 supplying pins on the bottom of the robot.
(Six pins are need exactly. If there are not enough, please reinstall all of six)
- 3) Check the condition of power supplying pins.
If they are abnormal condition, need to replace.
- 4) If it's still not moving, it might be discharged.
Lay down the robot on the playing ground for 30 minutes then play again.
If it's discharged, face LED blinking frequently.
(Refer to page11)
- 5) If it's still not working, replace the robot.
- 6) After all, you cannot solve the problem, call to the engineer.

B. The ball does not come out

Once the ball goes in goal area, the ball move through the guide to the center pipe. And Air Blow System will blow the ball to the playing ground.

The balls might be jammed at the entrance.



Push the blow button on the control panel.

- 1) Try to test with blow button on the control panel in the front door
- 2) The ball is still not come out :
If there is any foreign element, particle, or dust in the goal area or in the guide, the ball will not come out to the ground and it needs to remove them immediately.
- 3) How to remove particles : Use THE vaccum cleaner to remove particles in the ground especially in the goal area and remove particles in the guide with hands after opening the door behind the machine.

7. Parts replacement

7.1 Robot

1) Exchange of Pins

The power supplying pins are for supplying the power from the power supplying board to the robot.

If the tip of pin is worn out, it needs to change with new one. (Every 500 plays)
There are 6 extra pins in the package for replacing.



Power Supplying
Pins condition



(Normal Condition) (Need to replace)

It is easy to take out pin by pulling it and push the pin until the gold color part is not showing when replacing it.

2) Exchange of tire

(1) Disentangle the wheel with a Snap Ring remover.



(2) Remove the damaged tire on the wheel and set new tire.




7.2 Stadium

1) Replacement of LED in the playing ground.

*** NOTICE.**

You must turn off the machine before you do work.

- 1) Pull up the cover and check the LED location. Unscrew 2 bolt that fix LED board, then replace LED board.
- 2) Install the LED board in reverse way.

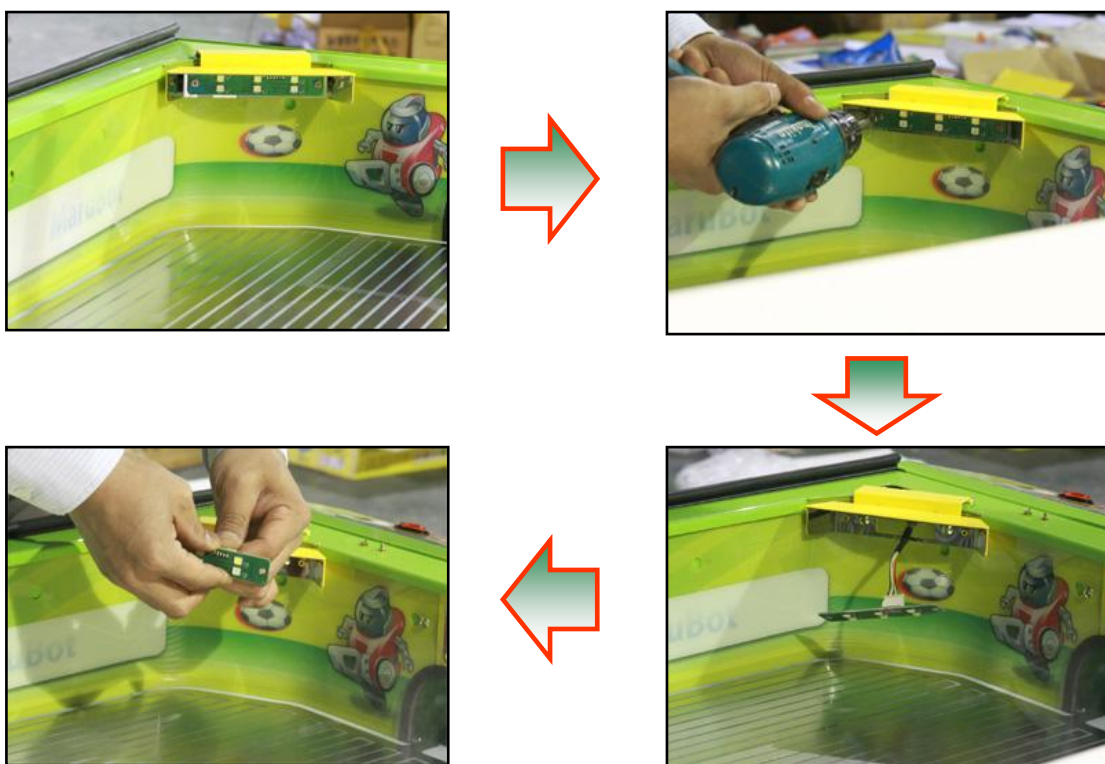

< Disassemble order >

2) Robot Control part (Joystick, Start button, Steering)

*** NOTICE.**

You must turn off the machine before you do work.




- 1) Unscrew all bolts pix the panel, then uncover the part, and replace.
- 2) Install the part in reverse way.




8. Specifications

8.1 Stadium specifications

- Size : 1500 * 870 * 864 (W x D x H)mm
- Weight : 185kg
- Power : AC 100V, 50Hz

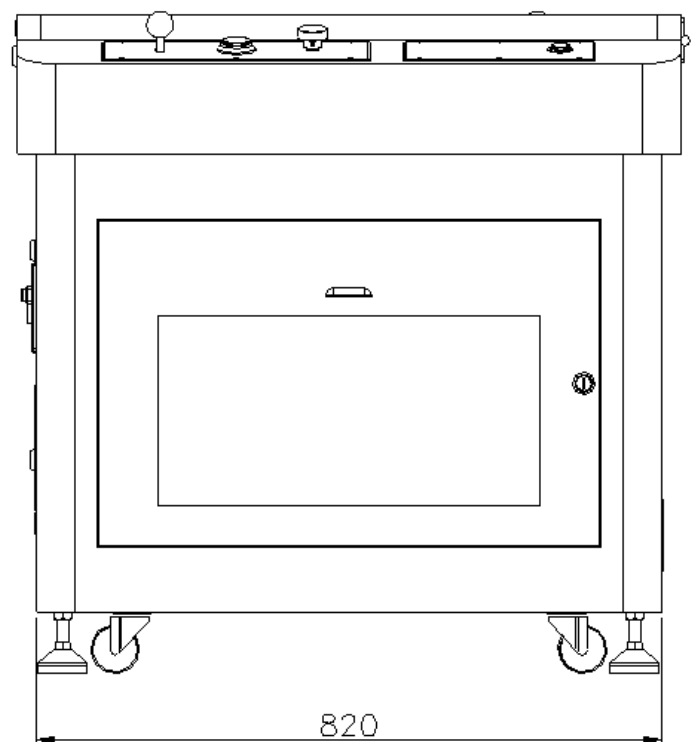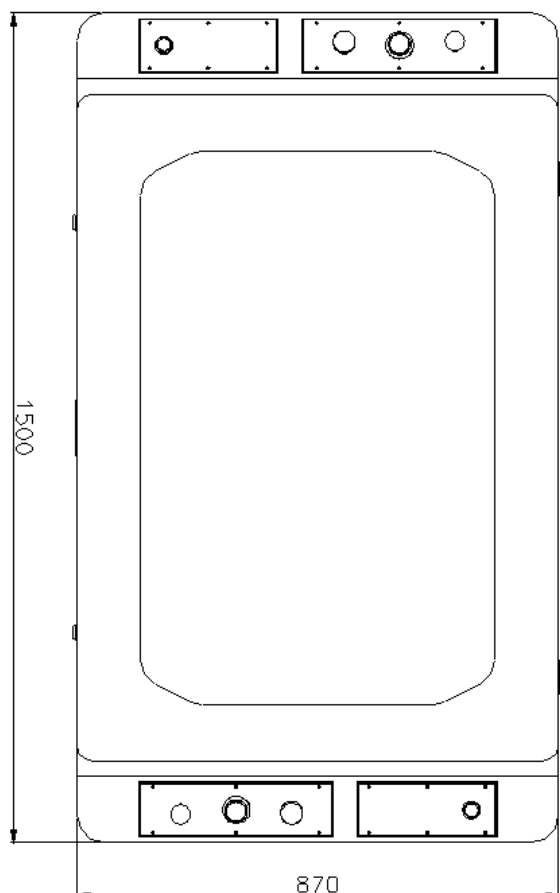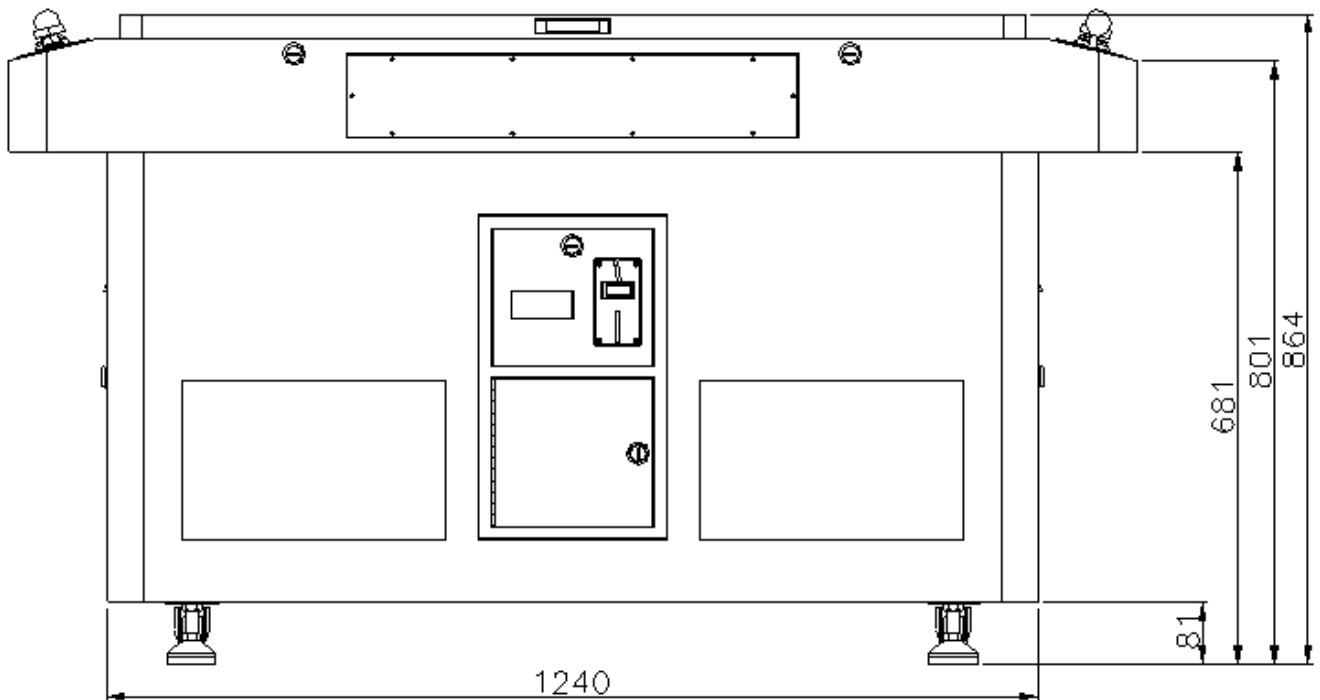


8.1.1 Stadium part's name

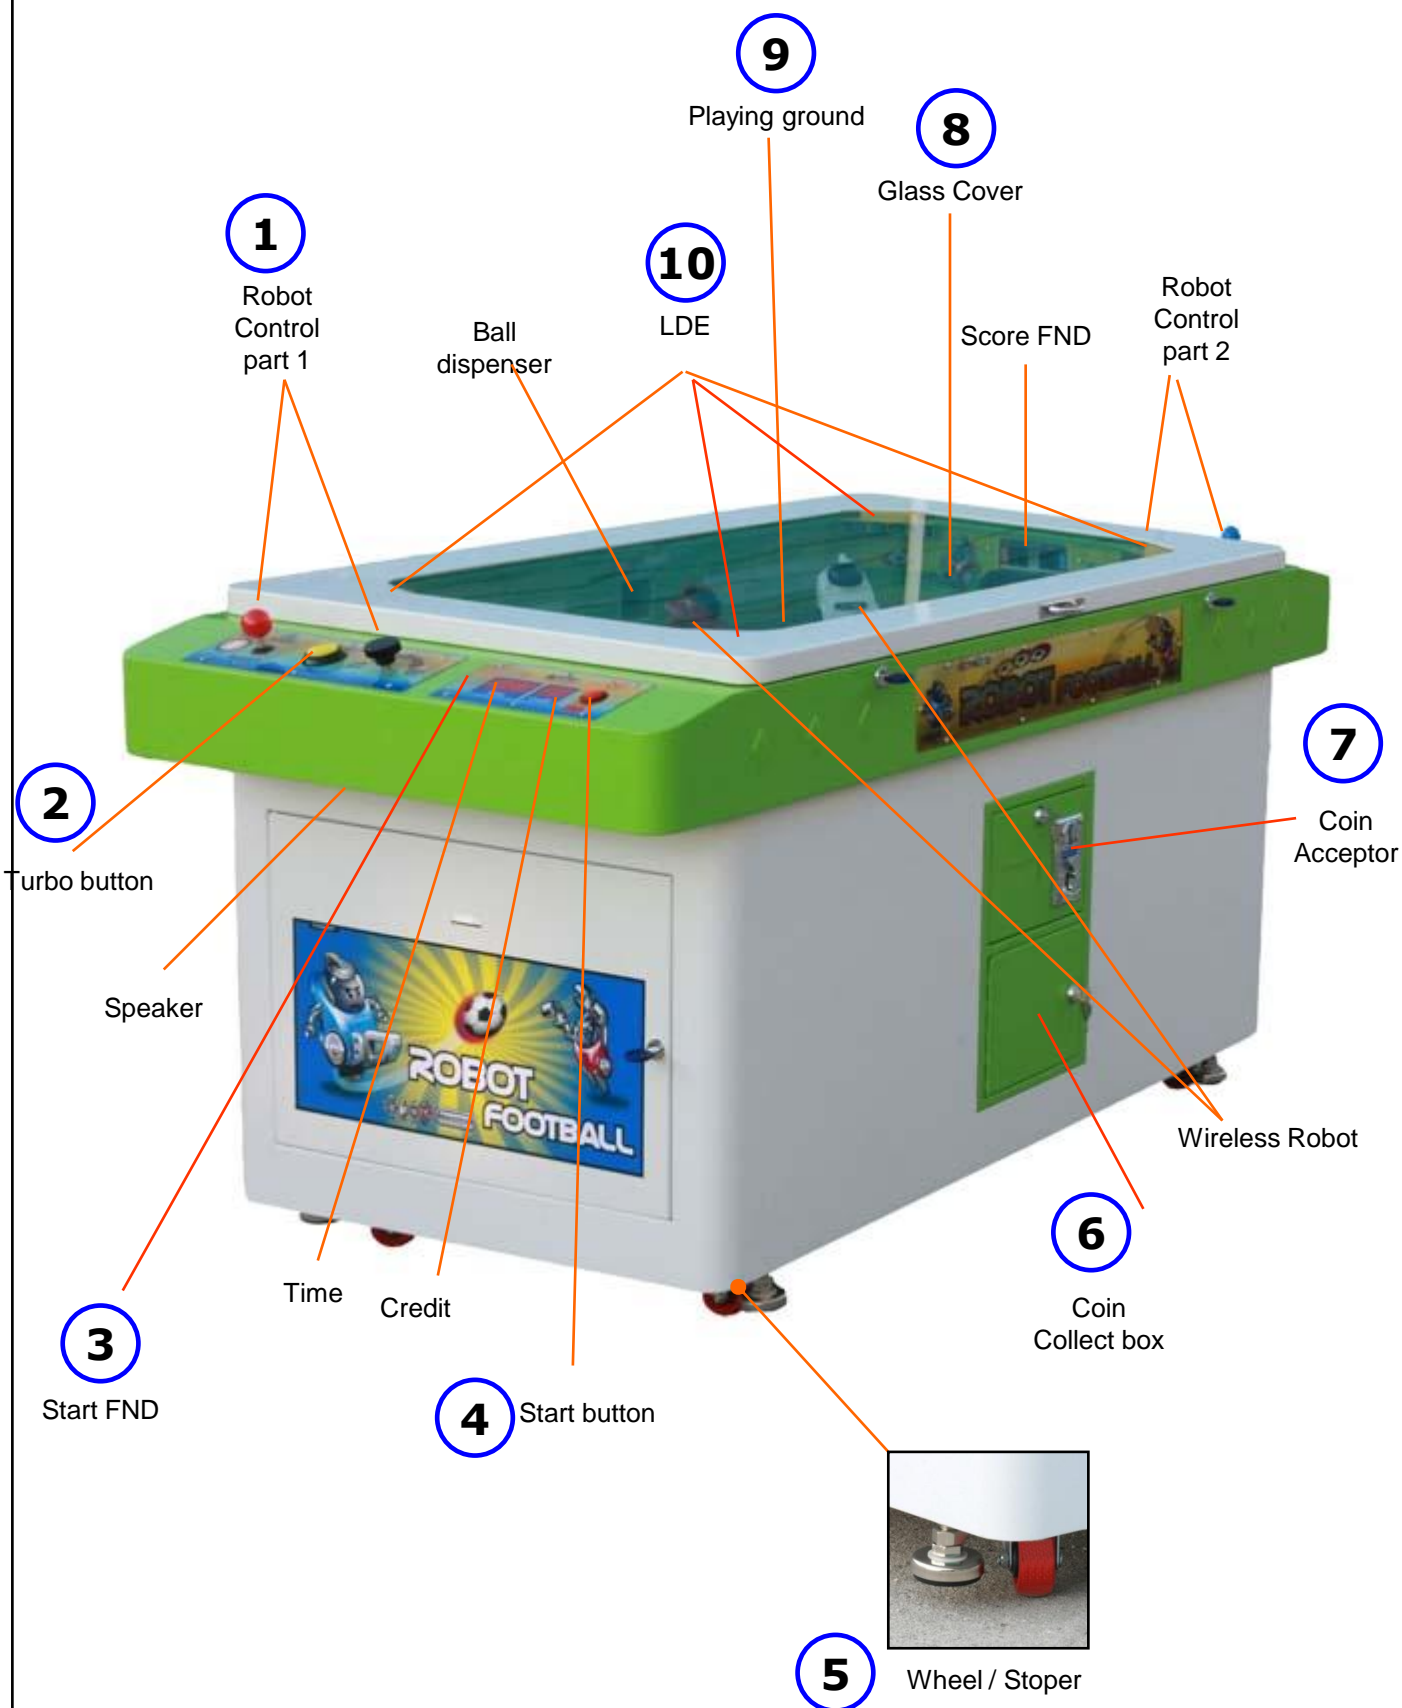

8.1.2 Stadium Part List

NO.	Parts	Components	Description	Amount
1/2	Robot Controller Module	Joystick	Moving Control (Red, Blue)	2
		Steering	Turning Control	2
		Turbo Button	Fast movement	2
		Panel	–	2
		Acrylic cover	–	2
		Joystick Bracket	–	2
		Steering Bracket	–	2
		Harness	–	2
3/4	Start FND	FND Board	Time/coin FND	2
		Start Butoon	–	2
		Panel	–	2
		Acrylic Cover	–	2
		Harness	–	2
5	Wheel/Stopper	Wheel	Wheel for movement	4
		Stopper	Set the machine	4
6/7	Coin Collect Module	Coin Acceptor	Sample Coin acceptor	1
		Coin Collect	Coin Collect box	1
		Bill acceptor cap	Block it when you don't need a bill acceptor	1
		Key	Door Lock	2
		Coin Box Bracket	–	1
		Coin acceptor Door	–	1
		Coin collect Door	–	1
8	Glass cover	Glass	Reinforced glass	1
		Door frame	–	1
		Glass Guide	Bracket for glass	1
		Handle	Rolling Type handle	1
9	Electric supply board	Electric supply board	Auto power supplying board	1
10	LED Light	LED Board	–	4
		Reflect panel	–	4
		Harness	–	4

8.1.2 inner stadium

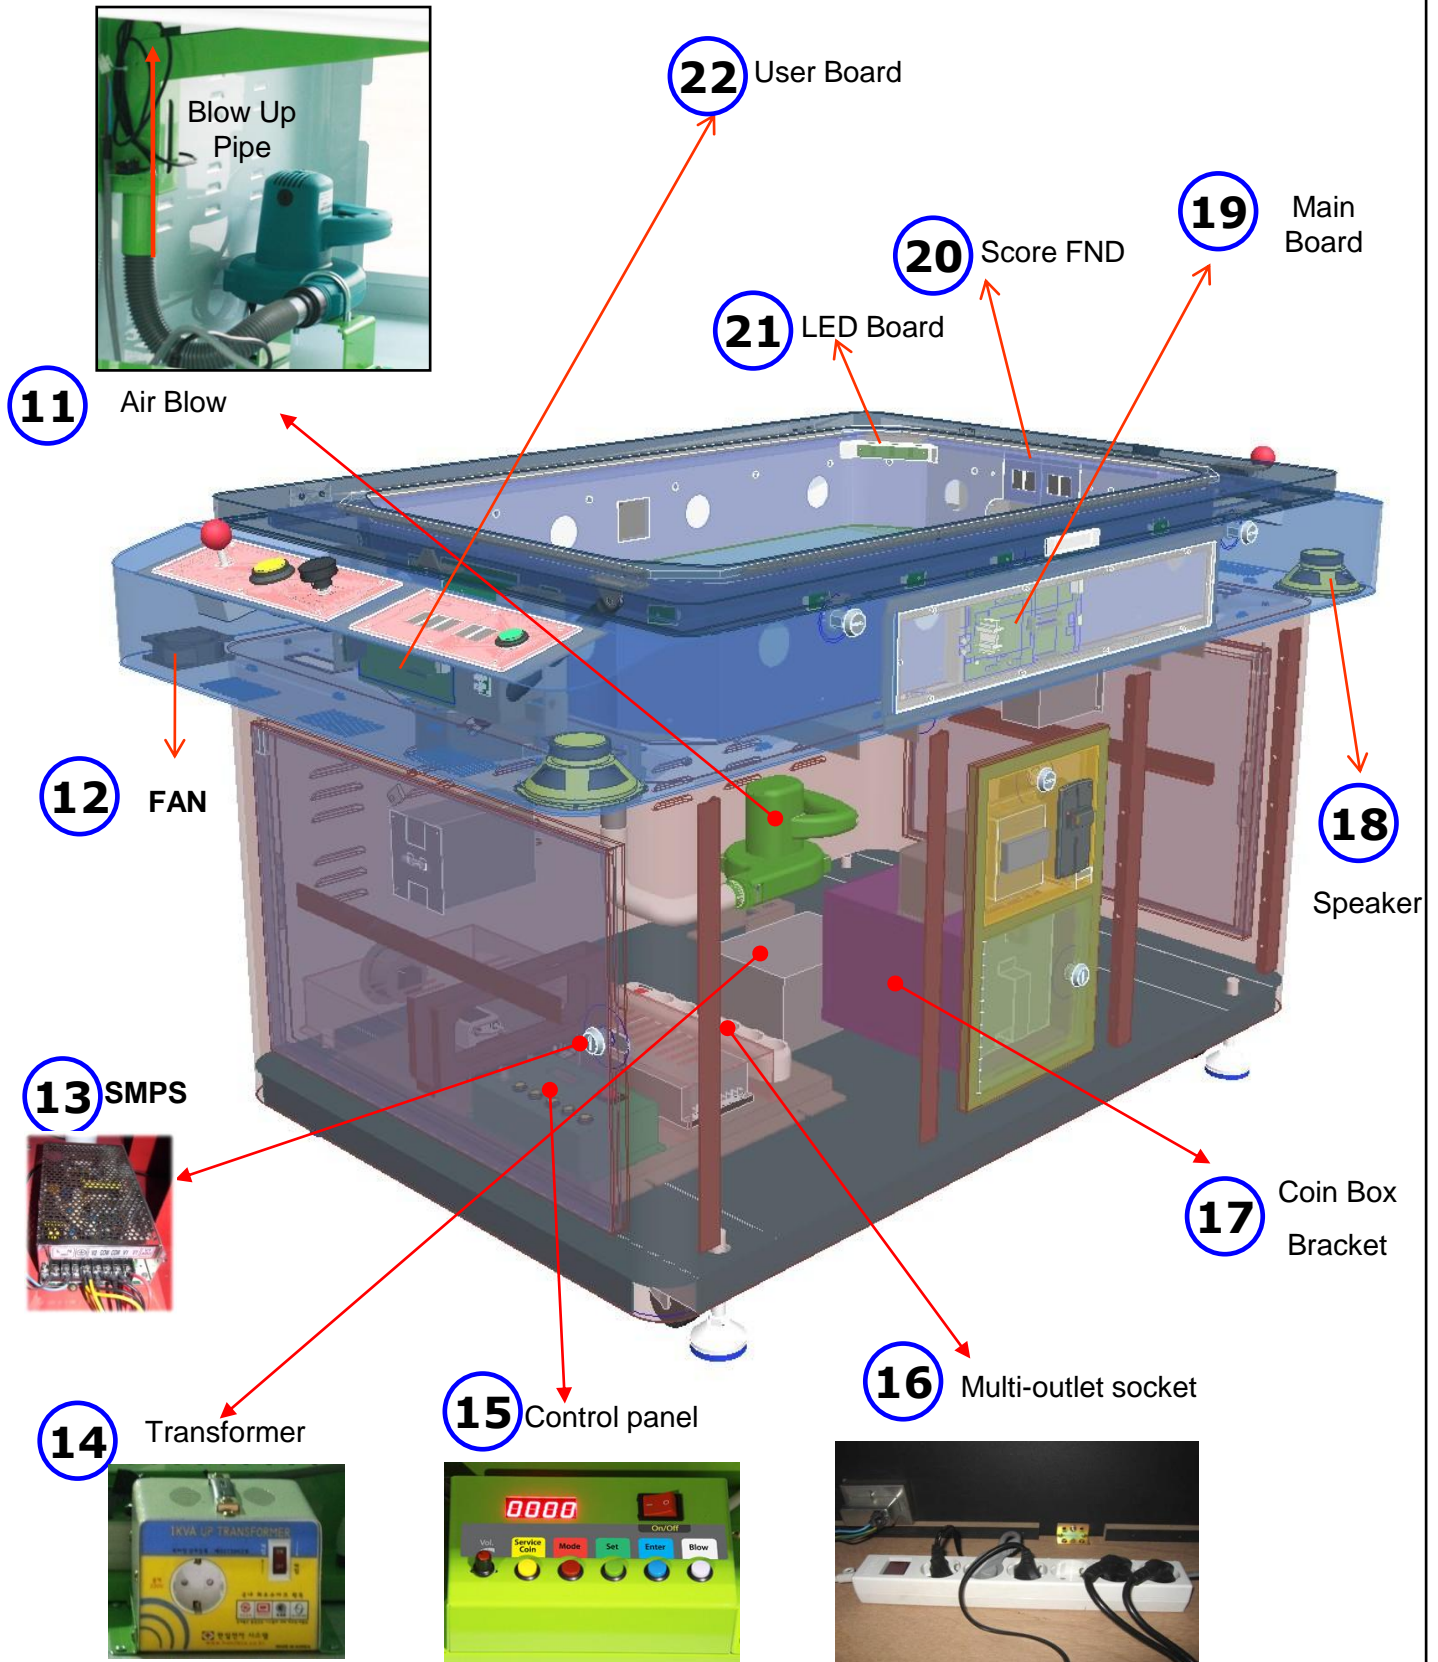


8.1.2 Stadium Part List

NO.	Parts	Components	Description	Amount
11	Air Blow	Air Blow + pipe	Ball dispenser. 220V	1
12	FAN	FAN	Cooling fan	2
13	SMPS	SMPS	–	1
14	Transformer	Transformer	110V ==> 220V	1
		Out-let	–	1
15	Control Panel	ON/OFF Switch	Main power switch	1
		Button	Service, Mode, Set, enter, blow	5
		Volume controller + Handle	Control the volume	1
		control FND	–	1
16	Multi-outlet socket	–	6 outlet	1
17	Coin Bracket	Coin acceptor	–	1
		Key + lock	–	1
18	Speaker			2
19	Main Board	Main Board	–	1
		MCU	Control the main board	1
		Coin MCU	Control the coin board	1
		Sound MCU	Control the sound	1
20	Score FND	–	Show the score	2
21	LED light	LED PCB	–	4
22	User Board	Board + Z/B PCB	Robot controller	2


8.2 Robot specifications



[MARUBOT(game robot)]

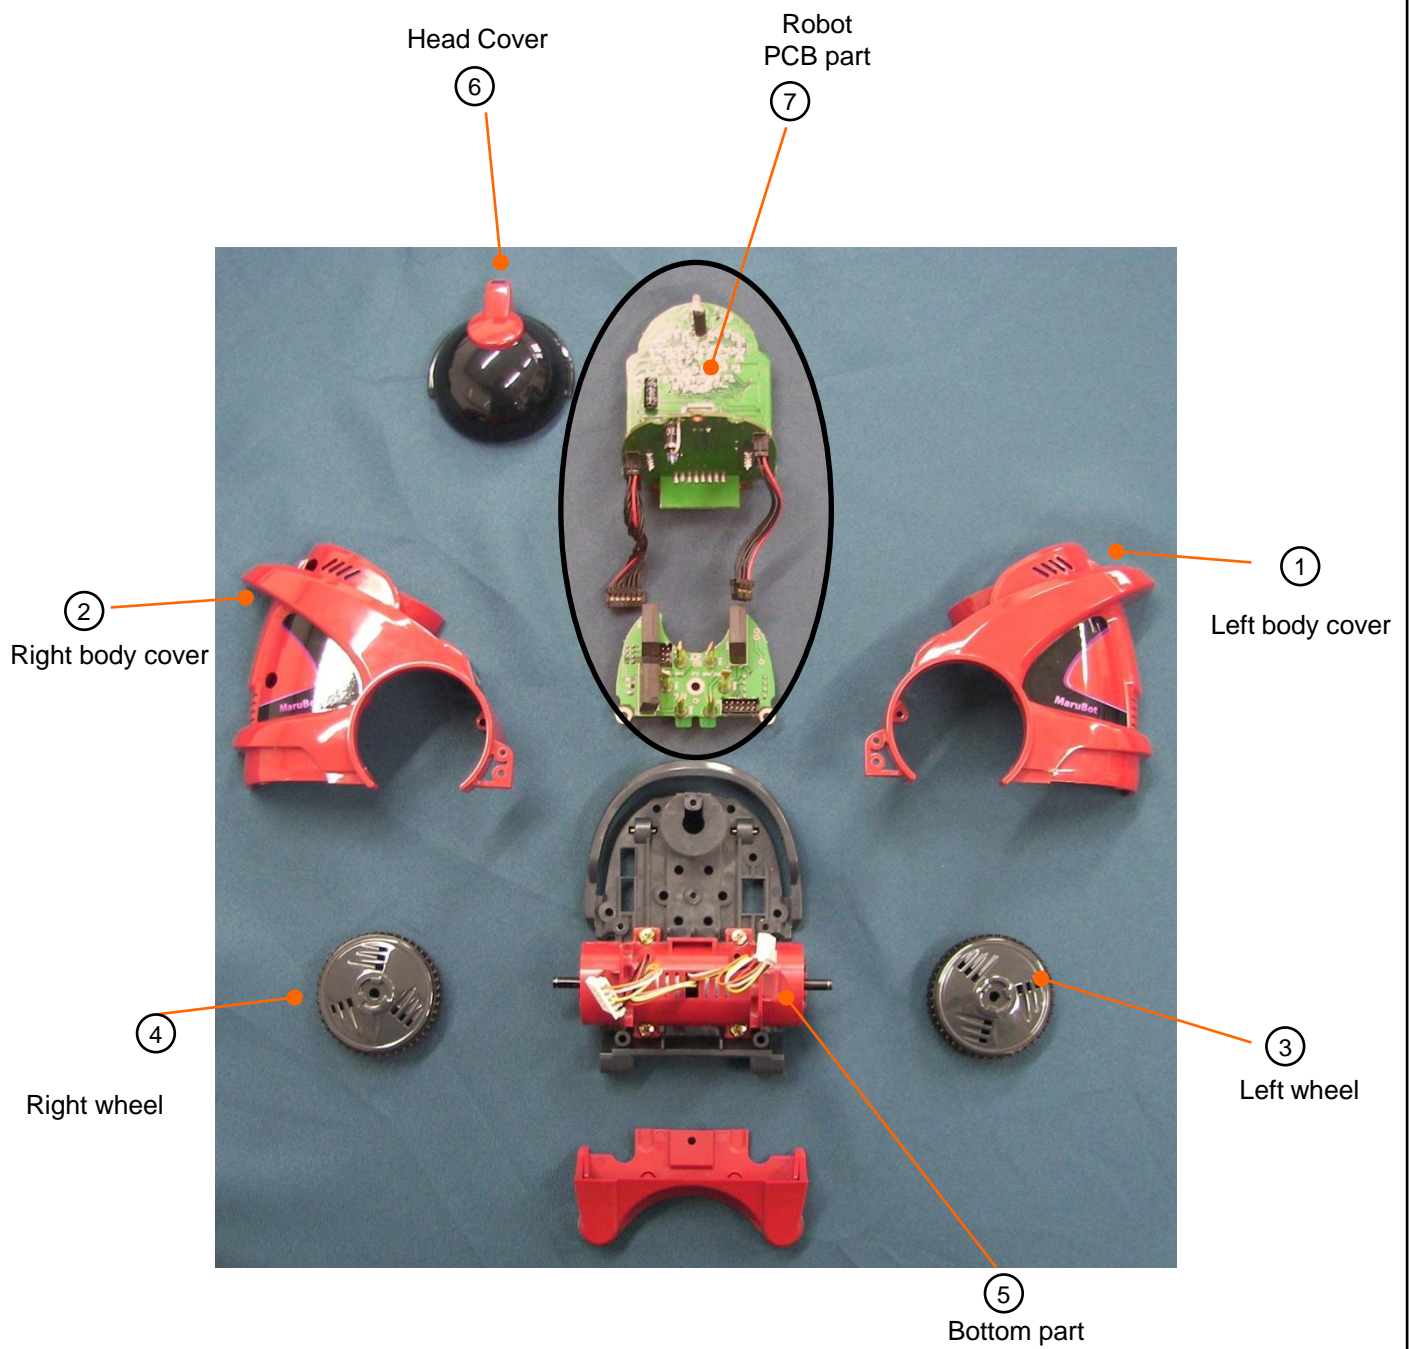


①② Left/Right Cover

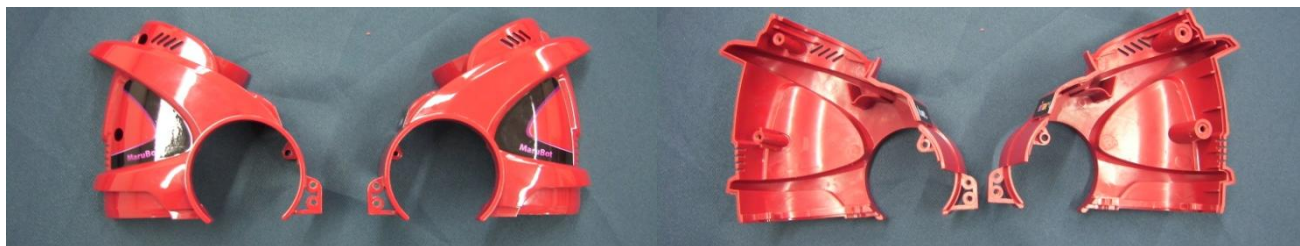

③④ Left/Right Wheel



⑤ Left/Right BLDC Motor / Base Cover




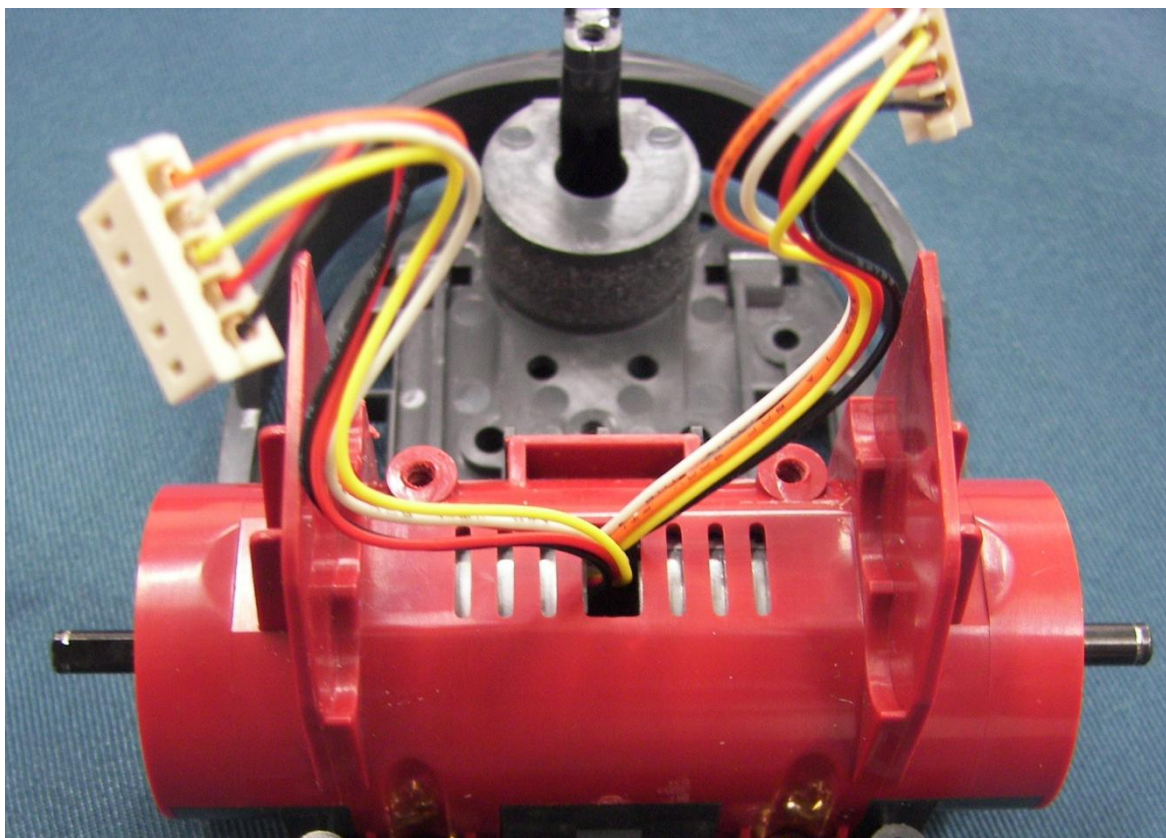


⑥ Head Cover / Reflector



⑦ Face PCB / Sensor PCB / Control PCB


Power PCB

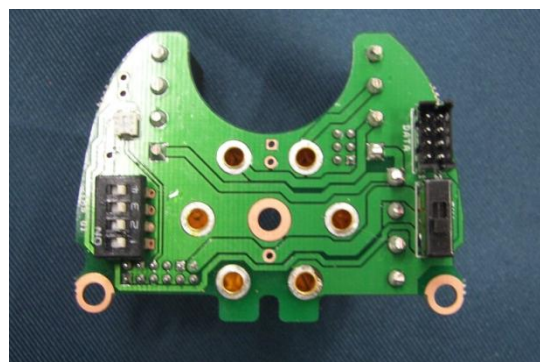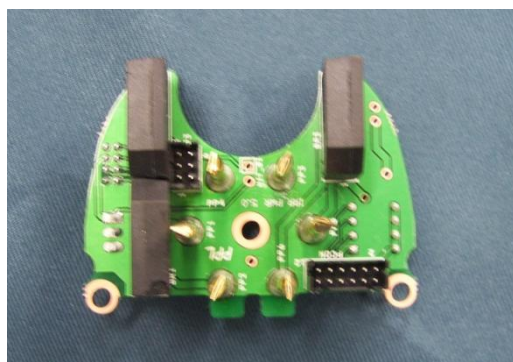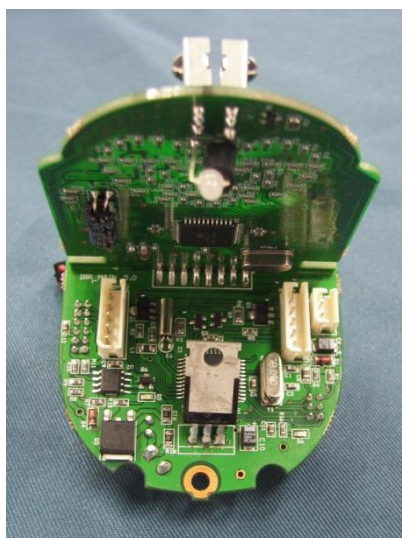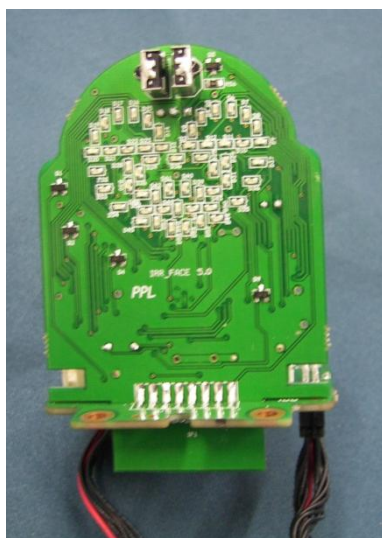

8.2.2 Robot Part List

NO.	Parts	Components	Description	Amount
1/2	Body Case	Robot body (Left)	Plastic cover	1
		Robot body (Right)	Plastic cover	1
3	Wheel set (left)	Wheel	–	1
		Tire	–	1
		Snap ring	–	1
4	Wheel set (right)	Wheel	–	1
		Tire	–	1
		Snap ring	–	1
5	Robot bottom part	Bottom Case	Plastic cover	1
		Motor cover	Plastic cover	1
		BLDC Motor	Planet gear motor	2
		Rear wheel	Bearing	2
		Rear wheel tire	Robber tire	2
		Harness	–	2
6	Head part	Head case	Plastic cover	1
		Top corn	Plastic cover	1
7	Robot PCB set	Face PCB	Control the face expression	1
		Sensor PCB	Main Control PCB	1
		Power PCB	Power supplying system	1
		Harness	–	1

8.3 PCB Circuit Diagram

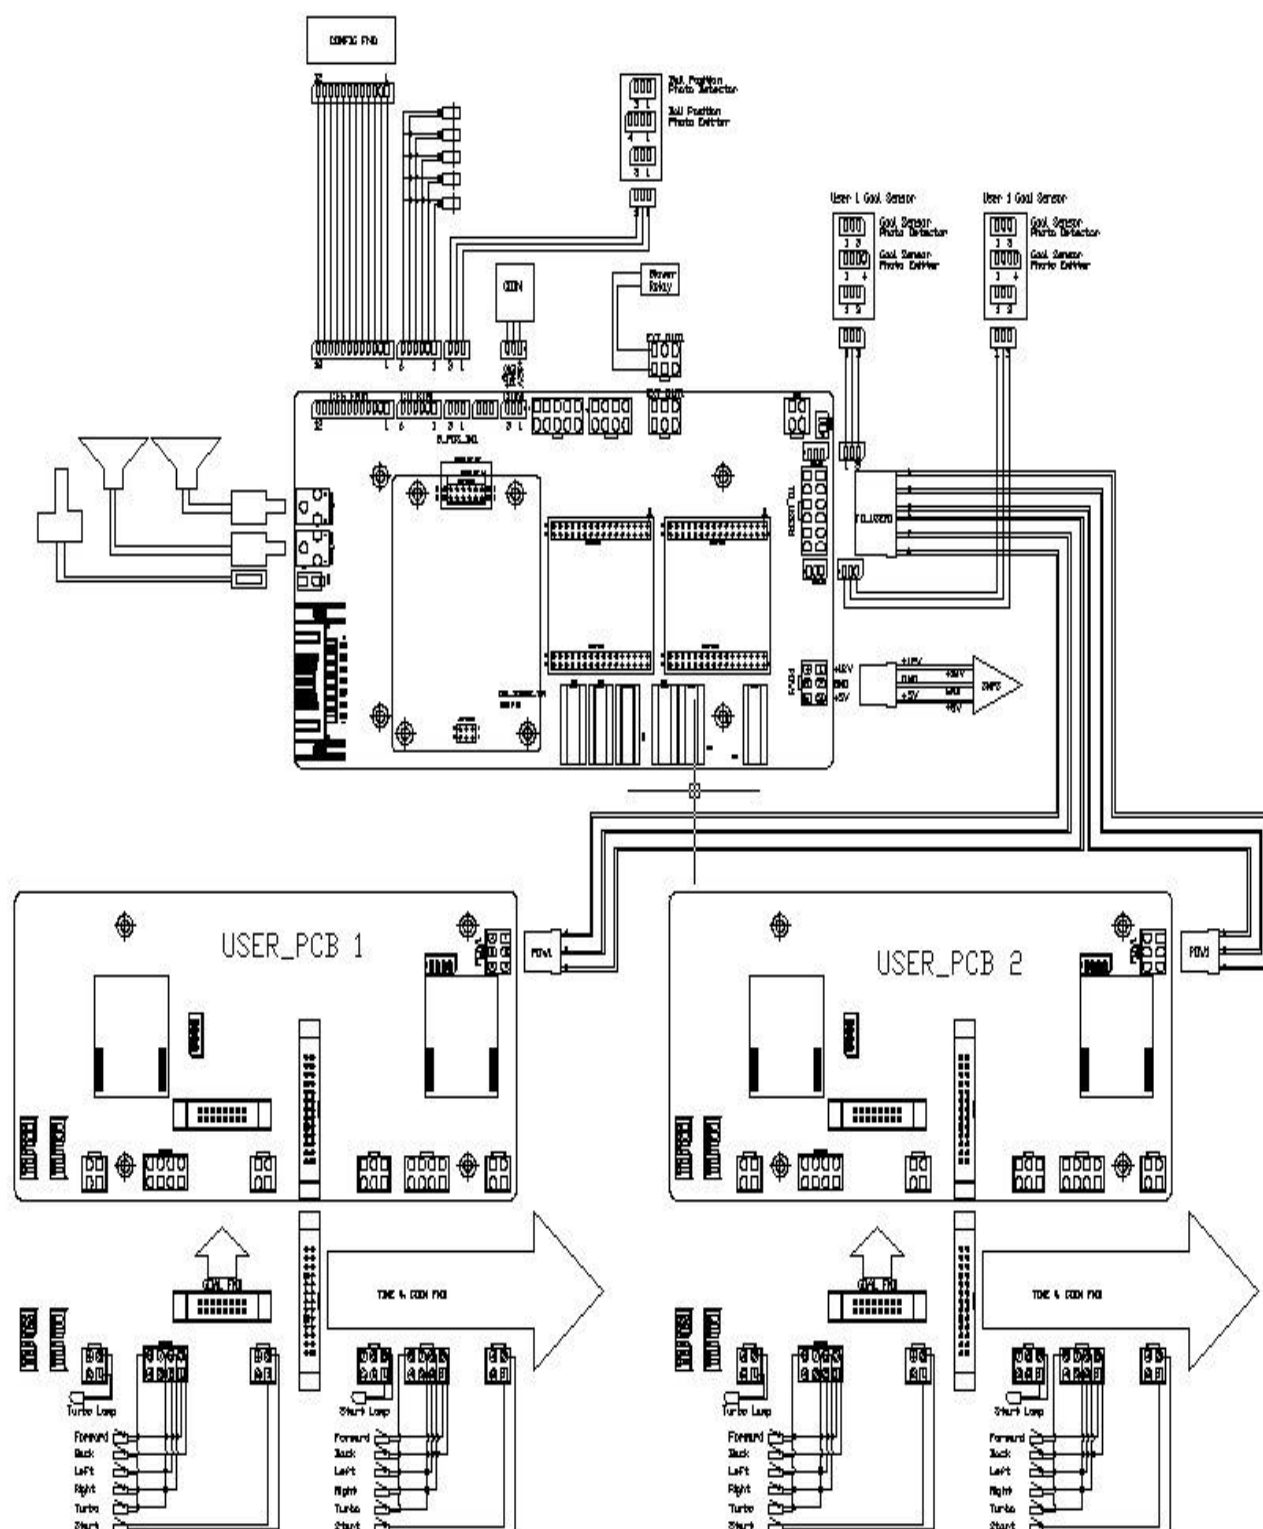


9. Appendix

9.1 Core technologies : **Electric Supply System**


Supplying the necessary electric power from the supplying board to robot - **No Battery Required.**



Robot in action

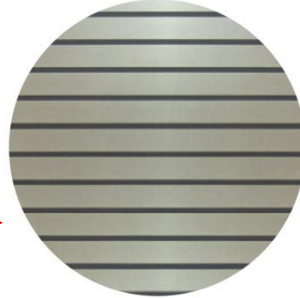

► **Electric Supplying Board**
Supplying the electric power
DC 12V +, - electricity

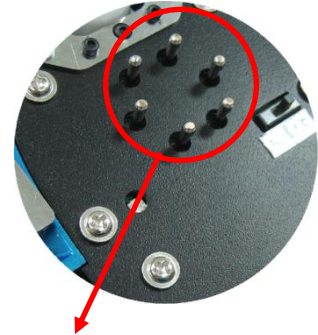

► **Supply and Demand part**
Located at robot's bottom part
Gets electric supply from the
board

- ※ [The main reason of unpopularity of robot game is due to battery issue in the past.](#)
- ※ At present electric supply system is patent registered in Korea (2004.6.22) & patent applied in Japan.

10. Customer Service

If you have questions concerning this product, please contact your local dealer.

IR ROBOT CO., LTD.

Head Office : 1302-2, 401-dong, Bucheon TechnoPark, 193 Yakdae-dong, Wonmi-gu,
Bucheon-si, Gyeonggi-do, Korea

Tel.+82-32-326-3466 / Fax.+82-32-326-3468 / Mobile.+82-10-4185-3466

E-mail : sales@irrobot.com

Homepage : www.irrobot.com